

Special tools

Remover and installer for valve insert



000 589 24 61 00

Conventional tools

Wrench 1/2 x 9/16"

Assembly tester with 3 filling hoses and vacuum pump
or evacuating and filling equipment for air-conditioning systems

e. g. made by Christof Fischer,
Reichenhaller Straße 55-59
D-7000 Stuttgart 50

Leak tester (Rilo-senior-leak detector)


Leak test

If a checkup shows that the air-conditioning system holds not enough refrigerant, the cause for the loss must be found. The leak test can be made with the system both filled or empty.

Leak test with system filled

With the system filled, leaks can be found with a leak tester (1).


For this purpose, switch on air-conditioning system to full capacity and run engine at approx. 2000/min. Stop engine after approx. 2 minutes. With mouth (2) of leak tester, slowly check circuit and hold for some time close to spots where a leak is suspected, e.g. at connecting points, pipe connections, grease cup of compressor, on valves, on cooling air outlet etc. If refrigerant R 12 emerges at one of these spots, the leak is indicated optically or acoustically by the leak tester.

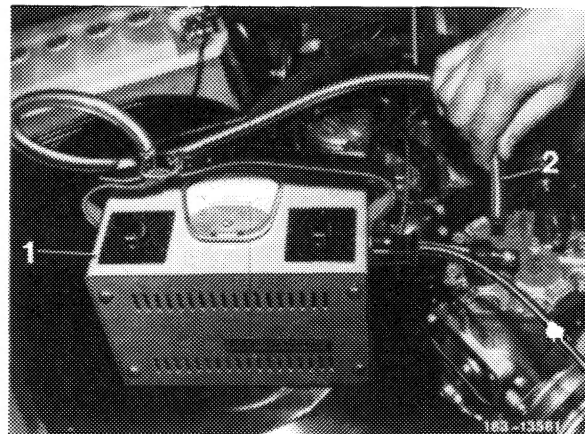

When the system is completely drained, a vacuum pump (1.1) is used to evacuate the entire system, that is, the max. possible vacuum is generated. Checking vacuum with a vacuum gauge permits finding out whether the system has no large leaks. Check oil level in compressor first (83—520).

Evacuation

-

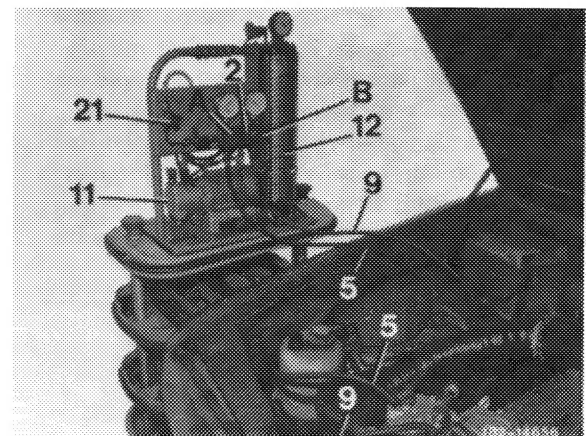

6 Disconnect connecting hose (8) or close valve (21) and stop vacuum pump (11). Open valves (A and B) after approx. 10 minutes.

7 If the vacuum pressure in relation to previously read value is down by more than 0.15, the system has not been evacuated long enough or is leaking. Evacuate system once again. If the vacuum drops with regard to the previously read value, fill approx. 100 g refrigerant (gaseous) into system. Check entire system for leaks with leak tester and seal leaks. Then evacuate system again.


8 Close valves (A and B).

9 Fill system with refrigerant R 12 (83–514).


10 Connect service unit (items 1 and 2).

11 Connect valves (A and B) to assembly tester (2) and valves to filling cylinder (12).

12 Open valve (19 and 21) and operate vacuum pump (11).

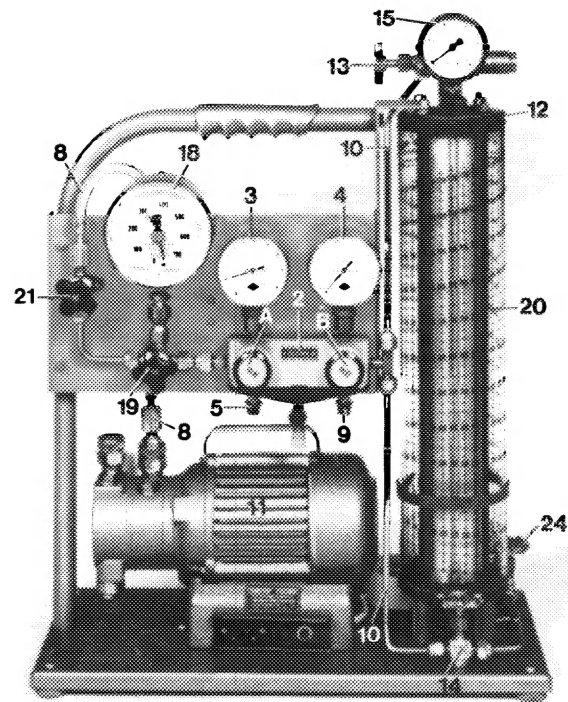


RB3-5696/1

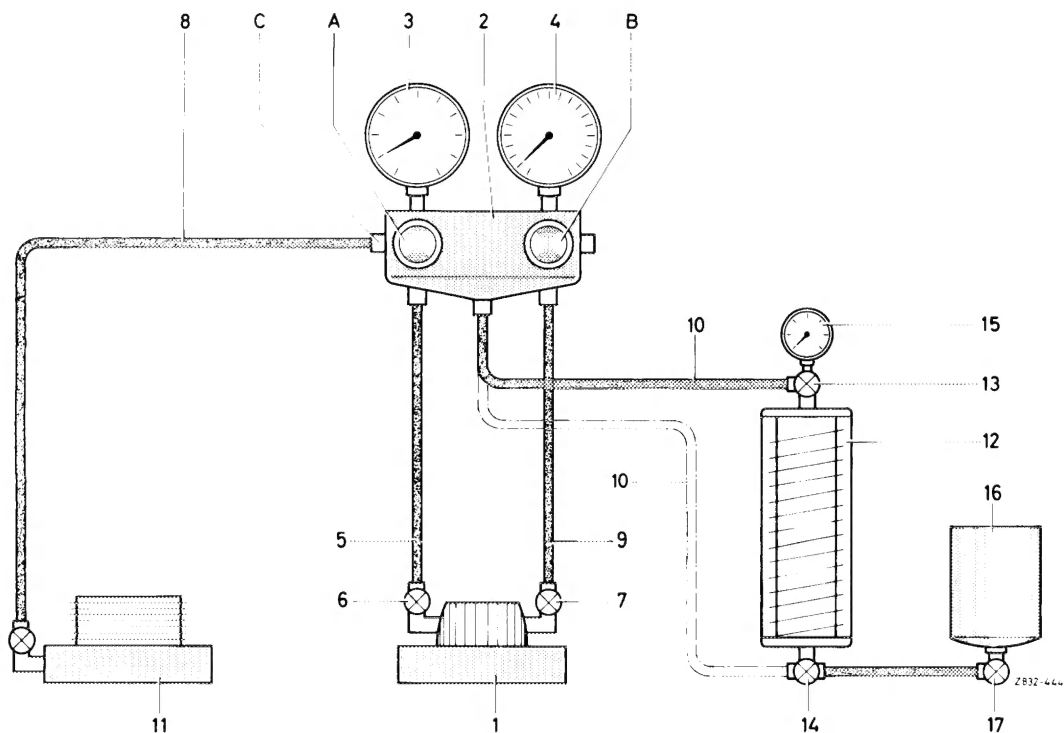

Assembly tester and filling cylinder with all connections

A Valve on suction pressure gauge	3 Suction pressure gauge	8 Hose line	13 Upper valve
B Valve on high-pressure gauge	4 High-pressure gauge	9 Hose line	14 Lower valve
C Schrader valve on assembly tester	5 Hose line	10 Hose line	15 Pressure gauge
1 Refrigerant compressor	6 Service valve (suction end)	11 Vacuum pump	16 Refrigerant bottle with R 12
2 Assembly tester	7 Service valve (pressure end)	12 Filling cylinder	17 Valve on refrigerant bottle

- 13 Continue evacuating vacuum meter until pointer of vacuum meter stops. The max. possible vacuum has now been attained.
- 14 Align drag pointer of vacuum meter with pointer.
- 15 Evacuate air-conditioning system (according to items 3 to 5). The max. possible vacuum is attained, when the pointer of the vacuum meter arrives at value of preset drag pointer.
- 16 Close valve (21) and switch off vacuum pump.
- 17 If the vacuum meter shows a steady pressure increase, the air-conditioning system has a leak.

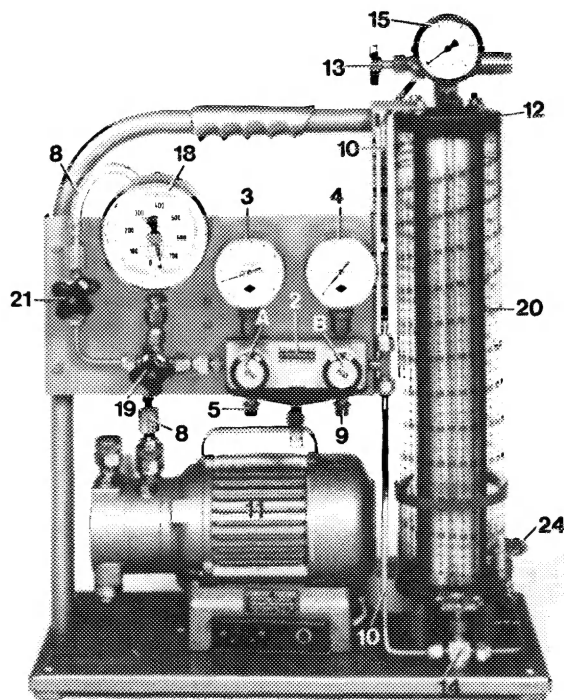

R83-5696/1

Evacuation with vacuum meter (Torr meter)

Note: A vacuum meter (18) is located on the evacuating and filling device (service unit) between assembly tester (2) and vacuum pump (11).

The max. attainable vacuum can be measured by means of the vacuum meter. A leak in air-conditioning system is more clearly shown by a drop in vacuum.

The passage to vacuum meter is closed by valve (19). The passage from assembly tester (2) to vacuum pump (11) or to valve (21) will remain open.

Upon evacuation, valve (19) should always remain closed. If the vacuum meter is loaded at more than 1.2 bar, it will become defective and can no longer be used.

- 18 Fill air-conditioning system with approx. 100 g refrigerant, then check entire system for leaks with a leak tester and seal leak.
- 19 Evacuate air-conditioning system once again.
- 20 Close valves (A and B as well as 19 and 21).
- 21 Fill system with refrigerant R 12 (83-514).